

Repair Window Slide

Size of window channel balance is 9/16" (W), 5/8" (D), 17" (L).


Window frame stops moving upward due to channel balance failure (mainly, string inside split up).




Detaching Window Frame



Original Bottom Guide

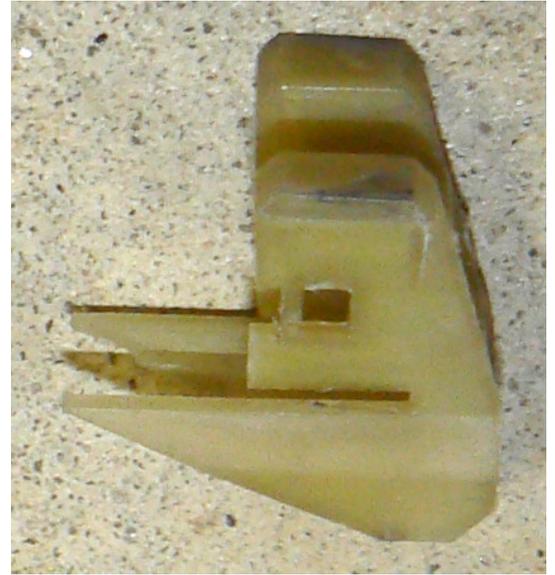

Bottom Guide Cut out Hands for New

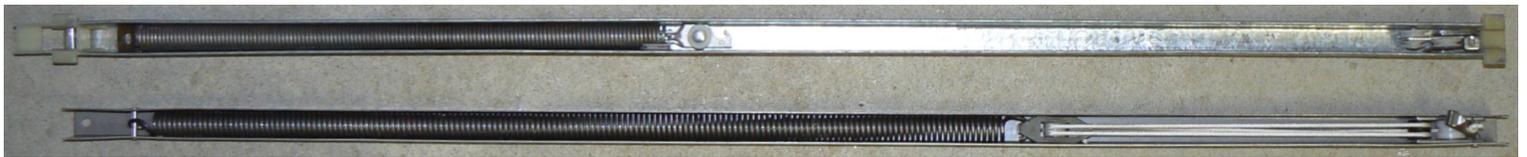

Broken Channel Balance with Guides (Upper), New Channel Balance without Guides (Lower)




Done (Top & Bottom Guide Assembled by Rivet to New Channel Balance (Old (Upper), New (Lower)))




Top Guide on Broken Channel Balance to be Removed




Bottom Guide on Broken Channel Balance to be Removed

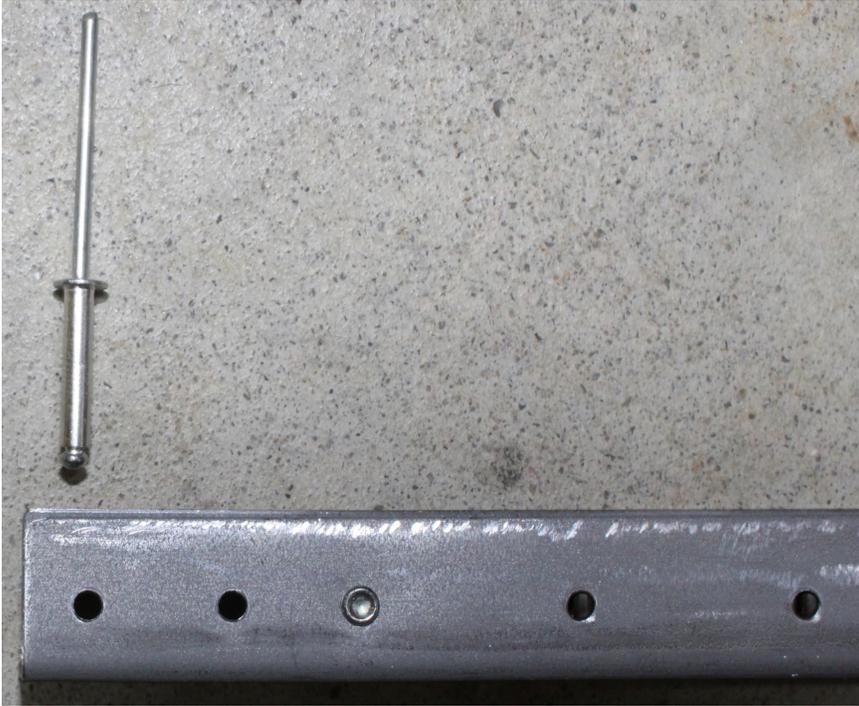

1/8" x 5/8" Rivet for Top Guide of New Channel Balance

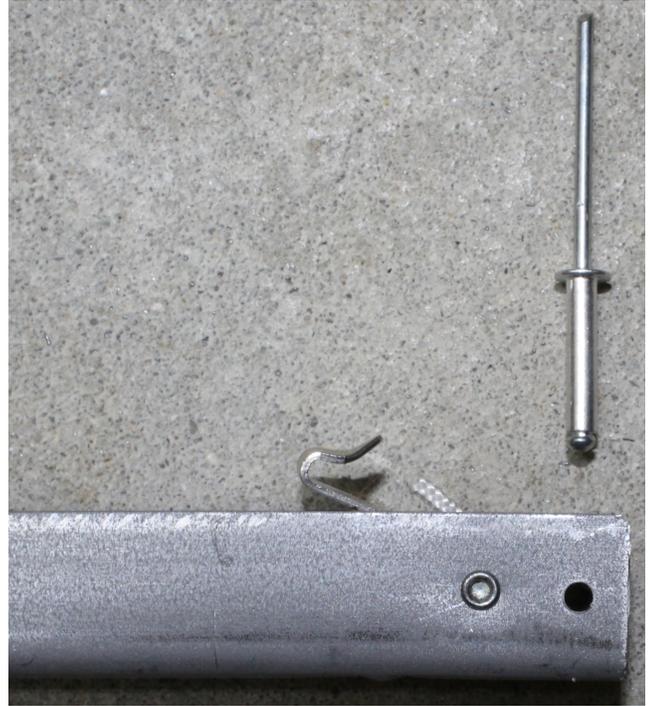

Rivet for Bottom Guide of New Channel Balance

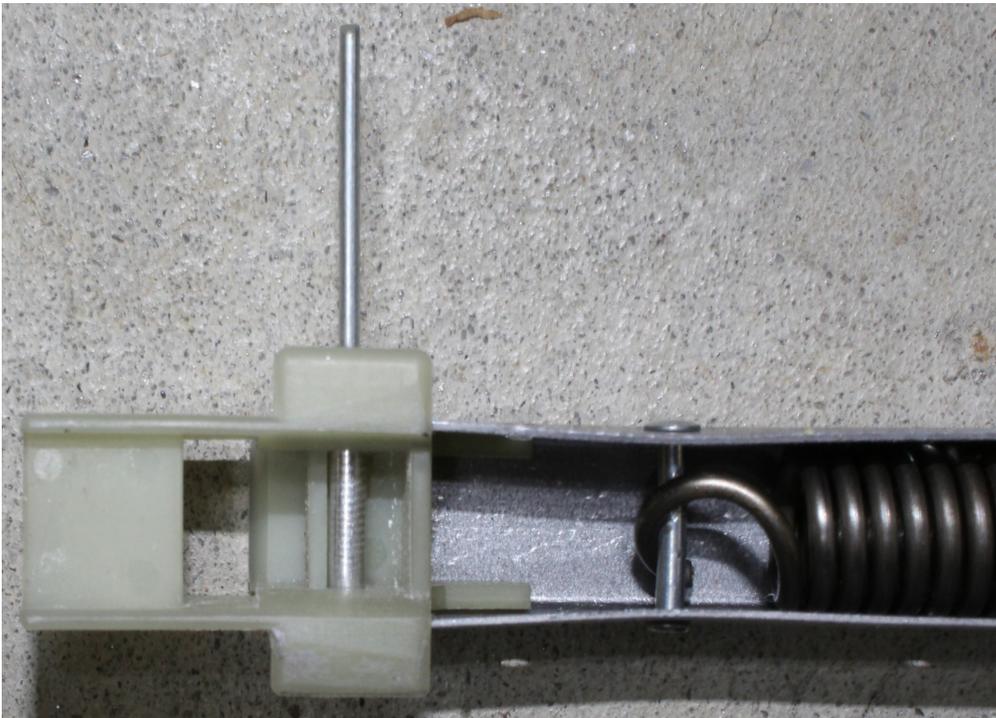

1/8" x 5/8" Rivet Passed through Hole to be Fixed



Rivet Fixed by Riveter